

GAME CONTROLLER SECURITY BRACKET

Thank you for purchasing a game controller security bracket from secure entertainment. We have spent years developing this product and hope that it will help secure the controllers in your public gaming space. Please contact us at info@secure-entertainment.com if you have any questions. Patent Pending

PARTS INCLUDED:

- BRACKET
- USB AND SECURITY CABLE
- SECURITY SCREW (FOR SECURING BRACKET AROUND THE CONTROLLER)
- ONE-WAY SECURITY SCREW (FOR ATTACHING SECURITY CABLE TO A SECURE SURFACE)
- SECURITY SCREWDRIVER BIT

NOT INCLUDED:

- SCREWDRIVER (ANY SCREWDRIVER WITH INTERCHANGEABLE BITS WILL WORK)
- FLATHEAD SCREWDRIVER OR BIT (FOR ATTACHING SECURITY CABLE TO SECURE SURFACE
- DRILL BIT AND DRILL

XBOX BRACKET





SAFETY PRECAUTIONS

- BE SURE TO SECURE THE SECURITY CABLE TO A SECURE SURFACE THAT WILL WITHSTAND THE TENSION OF THE CABLES BEING PULLED.
- Use caution and be aware of trip hazards created by cables
- CONTAINS SMALL PARTS (SCREWS AND SCREWDRIVER BITS)
- IF USING WITH A SECURE ENTERTAINMENT SECURITY CASE, DO NOT ATTACH SECURITY CABLE DIRECTLY TO THE CASE.



PLAYSTATION BRACKET



GAME CONTROLLER SECURITY BRACKET

XBOX BRACKET





PLAYSTATION BRACKET

GRAB BRACKET PART SHOWN ABOVE AND FEED USB PLUG THAT CONNECTS TO THE CONTROLLER THROUGH OPENING THAT LINES UP WITH THE USB SLOT ON THE CONTROLLER. PLUG IN THE USB CABLE TO THE CONTROLLER. INSERT THE BARREL END OF THE SECURITY CABLE INTO THE RECTANGULAR OPENING ON THE BOTTOM OF THE BRACKET.





Align the bracket and the cable so it surrounds the top of the controller. Make sure to insert the cable into the round slot located at the top of the bracket.



CONSOLE AND ENTERTAINMENT GAME CONTROLLER SECURITY BRACKET

XBOX BRACKET





Next, take the bottom part of the bracket and place it onto the controller from the bottom making sure to align the security cable into the slot in the bracket.





From the top of the bracket. Insert the security screw and tighten using the screwdriver bit provided (screwdriver not included)

PLAYSTATION BRACKET



Please refer to the safety precautions on the first page before attaching the security cable to a secure surface

OPTION I: SECURITY SCREW INSTALLATION



Pre-drill the hole that you will be using to attach the security cable using the provided security screw and washer. Insert the security screw into the hole of the washer and place this on top of the eyelet on the security cable and use a flathead screwdriver to screw in the screw into the secure surface. Be aware that these screws can only be tightened. If you wish to remove the cable from this surface at a later date, we suggest using a different screw of your choosing.

Plug in the usb cable to the game console and your gamers are ready to play!

Note: USB cables may come out of the controllers depending on high tension situations. If the controller will not turn on, be sure to check this first.



EAND ENTERTAINMENTGAME CONTROLLER SECURITY BRACKET
INSTALLATION INSTRUCTIONS

Please refer to the safety precautions on the first page before attaching the security cable to a secure surface

OPTION 2: LOOP THROUGH



Optionally, you can wrap the security cable around a secure piece of furniture. Simply wrap the cable around the location you want to install and pass through the USB and the other end of the security cable through the loop.

Plug in the usb cable to the game console and your gamers are ready to play!

Note: USB cables may come out of the controllers depending on high tension situations. If the controller will not turn on, be sure to check this first.