

Nex Playground Secure Wall Mount Shelf Installation Instructions

Thank you for purchasing the Nex Playground Secure Wall Mount Shelf from Secure Entertainment.

Please contact us at info@secure-entertainment.com if you have any questions.

PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION

Parts Included:

- 1- Nex Playground Secure Wall Mount Shelf
- 1-Threaded Security Plate
- 2 -Screws for Wall Mounting
- 2-Wall Anchors
- 2-Decorative Screw Covers
- 4-Screws for Mounting Nex Playground Case to Shelf

Not Included:

- Phillips Screwdriver
- ¼" Drill bit and Drill
- Hammer
- Level

Safety Precautions

- Use caution and be aware of trip hazards created by cables. Use cable raceways to cover loose cables.
- Shelf is rated to hold the Nex Playground Security Case and the Nex Playground itself. Do not attach any other items to the shelf
- If mounting to another surface besides drywall, please be sure to use the proper hardware
- Inspect the mount every 6-12 months, or after any impact, to confirm anchors have not loosened
- Verify final placement against your facility's building and ADA code requirements before drilling.
- Contains small parts (screws)


Nex Playground Secure Wall Mount Shelf Installation Instructions

Step One - Choose your Location

- The Nex Playground works best when centered below the TV. Please refer to the [Nex Playground Official Instructions](#) about the best placement for installation.
- **When installing the Secure Wall Mount Shelf, make sure to allow at least 8" from the bottom of the TV to the top surface of the shelf to allow installation of the Nex Playground Security Case and the Nex Playground system. The door to install the Nex Playground is on the top of the case and you will need that room to fit the system inside.**
- If you're using an HDMI cable other than the one included with the Nex Playground, you may need a 270 degree HDMI connector to make the connection. Because our shelf must comply with ADA requirements, it cannot extend any further from the wall, so some HDMI cables may not fit without a 270 degree connector. [This is a 270 degree connector that should work.](#)

Step Two- Mark your holes, install wall anchors and screw in the shelf


- Once you have determined your proper location for installing the Secure Wall Mount Shelf including the security case, hold the shelf onto the wall and place a level on it's surface. Once level, mark the two holes on the back of the shelf using a pencil.
- Using a ¼ inch drill bit, drill the holes for the wall anchors
- Gently tap the wall anchors into the wall with a hammer
- Screw in the shelf with the provided screws
- Cover screw heads with the decorative covers

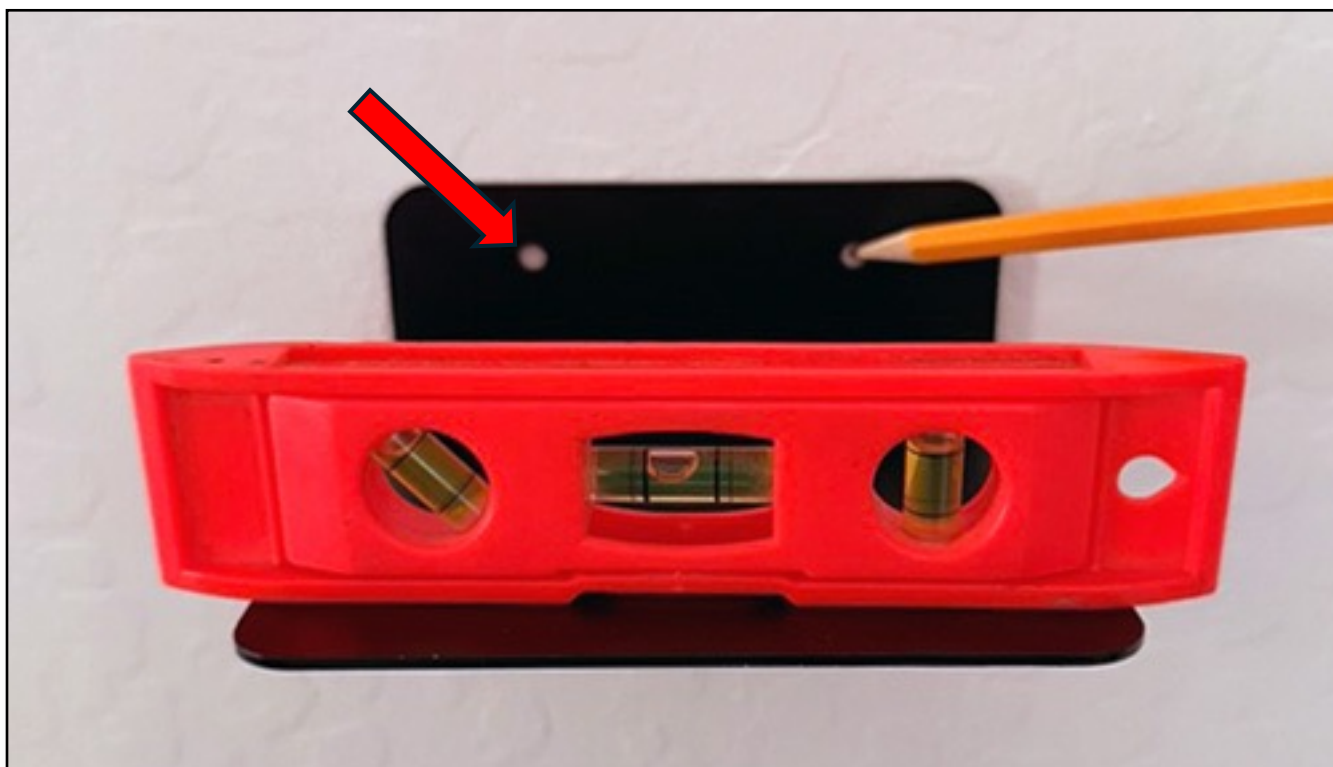

Nex Playground Secure Wall Mount Shelf Installation Instructions

Step Three – Attach Security Case to Shelf


- Place the Security Case on the top of the shelf and align it closely with the 4 holes on the top of the shelf. (Tip: drop one of the screws in the holes in the bottom of the case to help with alignment.)
- Take the security plate and hold it up to the bottom of the plate with the “UP” label towards the bottom of the shelf.
- Screw in one of the screws into the security plate to hold it in place. But do not fully tighten
- Continue to screw in the rest of the screws but do not completely tighten

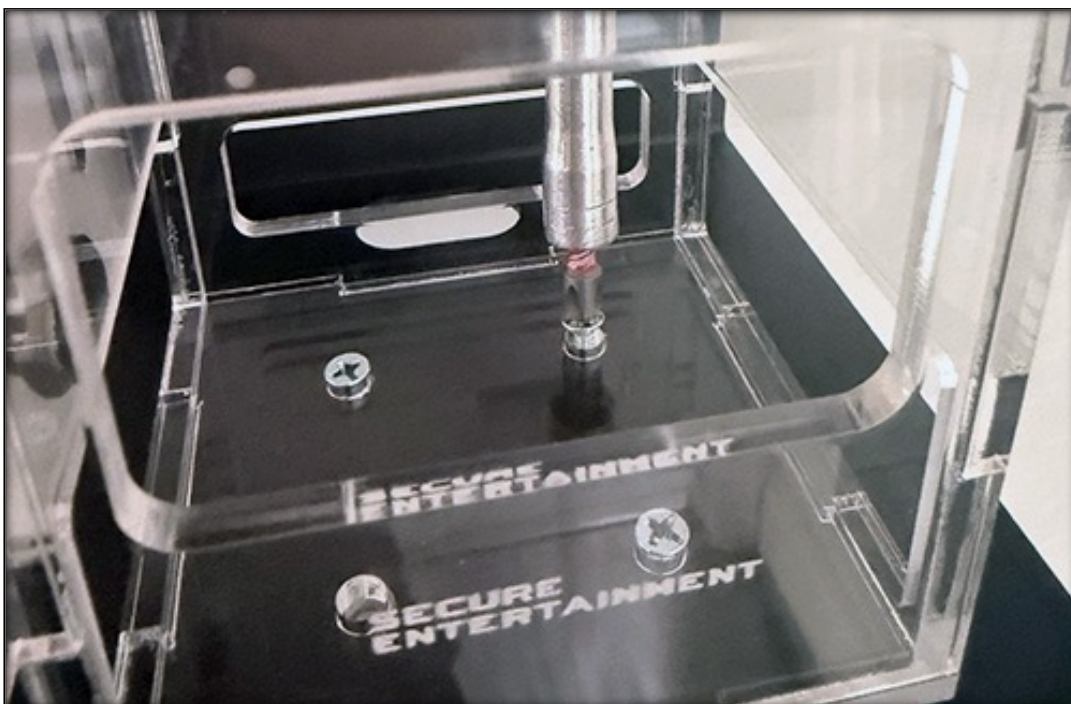

Nex Playground Secure Wall Mount Shelf Installation Instructions

Step Four – Check for Alignment and Tighten Screws

- Before tightening the screws, check for alignment of the case with the front of shelf.
- Once aligned, tighten the screws. Do not overtighten

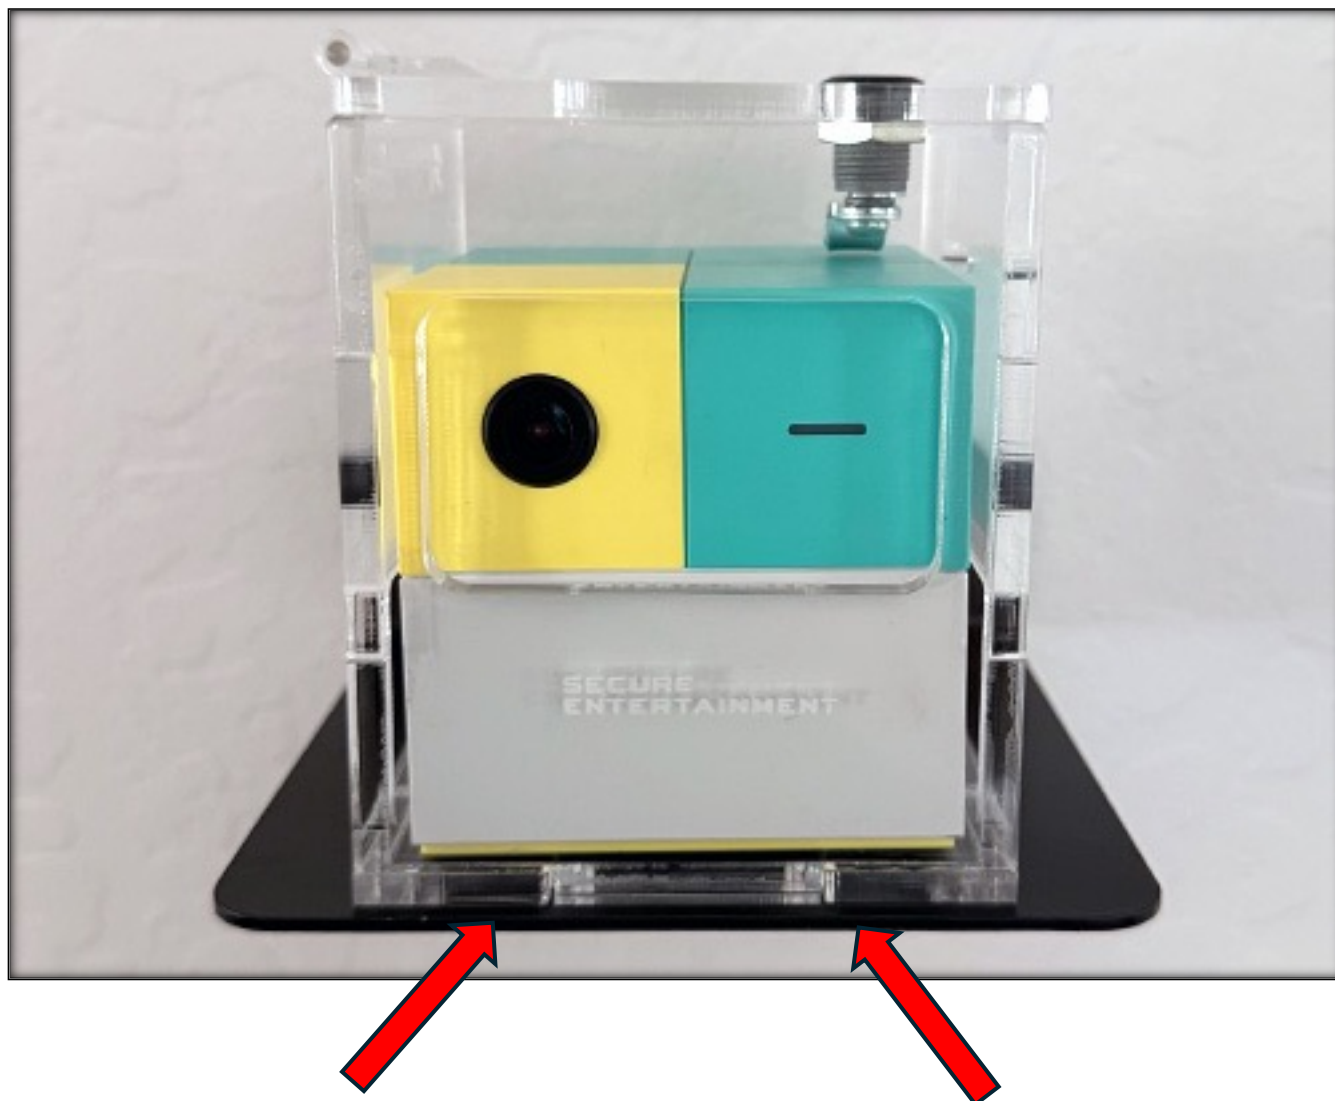

Step Five – Insert Nex Playground

- Place Nex Playground inside the case
- Install the HDMI Cable and Power Cord (Space is limited behind the case. The best method to install the HDMI cable is from the side and pivot it into the HDMI Port on the NEX Playground. If not using the HDMI cord that came with the Nex Playground, refer to the note on page two of the instructions.)
- Lock Case
- PLAY!